

AIP DUTCH CARIBBEAN

LOW ALTITUDE  
ENROUTE CHART - ICAO  
CURAÇAO FIR

COMMUNICATION

Curaçao Control	124.1/127.1
Curaçao Terminal	119.8
Hato Curaçao International Airport (TNCC):	
TWR	118.3
ATIS	132.6
Fleming International Airport (TNCB):	
TWR	118.7
ATIS	132.3
International Reina Beatrix Airport (TNCA):	
APP	120.9
TWR	118.0
ATIS	132.1

SPECIAL USE AIRSPACE


TND - 5 SFC - 10000\* Naval air exercises  
 TND - 6 SFC - 27000\* Gunnery/missile firing  
 \* by NOTAM  
 All other special use airspace is identified on the Area Charts for Curaçao/Bonaire and Aruba

NOTES

- ABA VOR declination 11° W
- PJB VOR declination 12° W
- PJG VOR declination 12° W
- Altitudes, elevations in feet, distances in nautical miles, bearings are magnetic.

LEGEND

- - - - - 11°W Isogonic line
- - - - - Area Chart Area chart boundary
- △ On-demand reporting fix
- ▲ Compulsory reporting fix
- ◇ Fly-by on-demand reporting wpt
- ⊙ Fly-over on-demand reporting wpt
- ◇ Fly-by compulsory reporting wpt
- ⊙ Fly-over compulsory reporting wpt

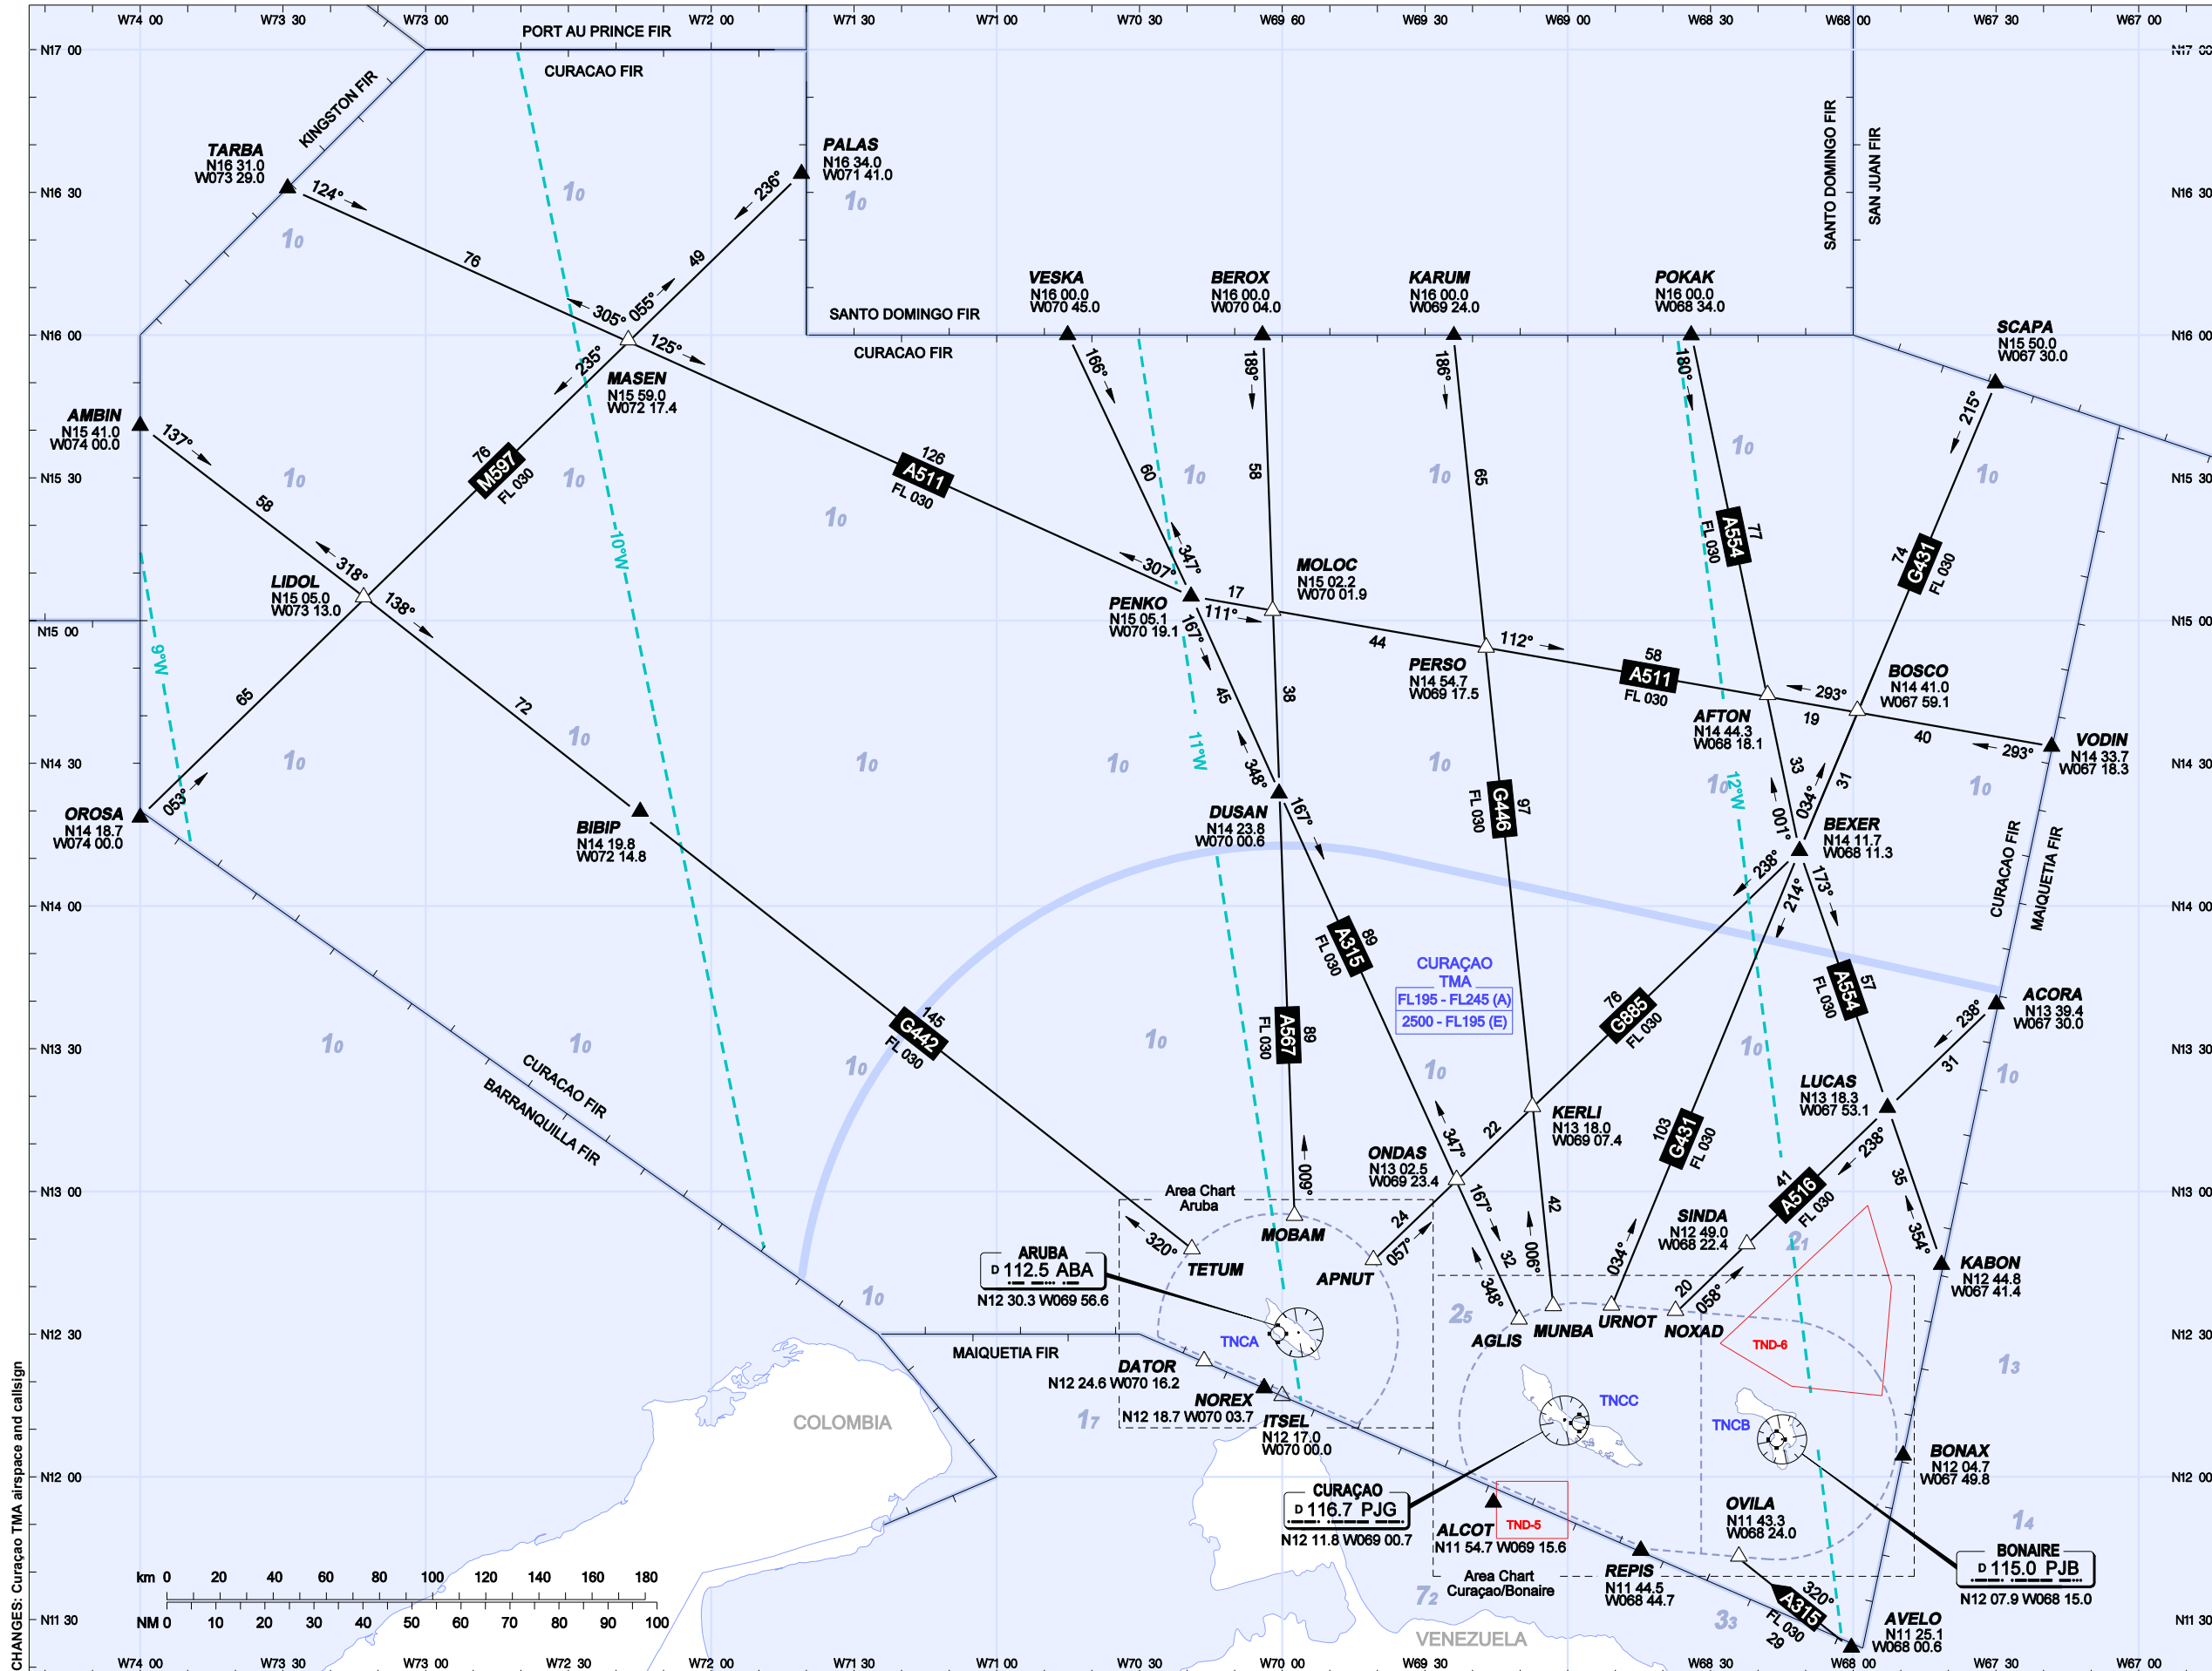

CHANGES: Curaçao TMA airspace and call sign

